


DAILY MAINTENANCE CHART

PE420BUDMVNo1

PIONEER ECLIPSE PE420BU

BEFORE EVERY USE, ENSURE THAT YOU COMPLETE THE FOLLOWING 4 STEPS



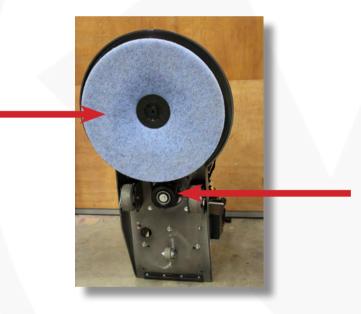


Inspect Pad & Belts for wear/damage, refer to manual for details.



 Check oil level, refer to manual for details.







Check around the Machine for any leaks/damage.



REPORT ALL DAMAGES AND TECHNICAL ISSUES TO THE SUPERVISOR




WEEKLY MAINTENANCE CHART

PE420BUWMVNo1

PIONEER ECLIPSE PE420BU

AFTER EVERY WEEK, ENSURE THAT YOU COMPLETE THE FOLLOWING 4 STEPS



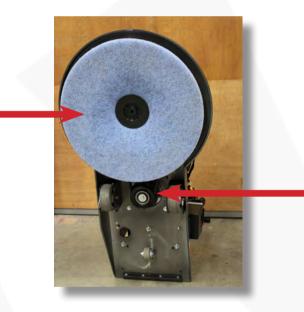

Remove Pad and inspect Pad & Belts for wear/damage, refer to manual for details.





Check Air Filter for debris. (Undo the 2 plastic knobs to remove the Filter cover).



Check Gas Bottle for level and damage/ rust. (Swap-a-bottle every year or so can ensure that you have a good condition bottle all the time).



Inspect gas connections for damage or abrasions. Get damaged parts replaced by your technician.



REPORT ALL DAMAGES AND TECHNICAL ISSUES TO THE SUPERVISOR