

DAILY MAINTENANCE CHART

NTT1840DMVNo1

NUMATIC TWINTEC CABLE

TT1840

AFTER EVERY USE, ENSURE THAT YOU COMPLETE THE FOLLOWING 6 STEPS

 


1.



Empty the recovery tank and rinse thoroughly with clean water.








Ensure the seperator seal is clean and undamaged. Replace if necessary.



 Clean air filter, keep this dry.









WEEKLY MAINTENANCE CHART


NTT1840WMVNo1

NUMATIC TWINTEC CABLE

TT1840

AFTER EVERY WEEK, ENSURE THAT YOU COMPLETE THE FOLLOWING 4 STEPS



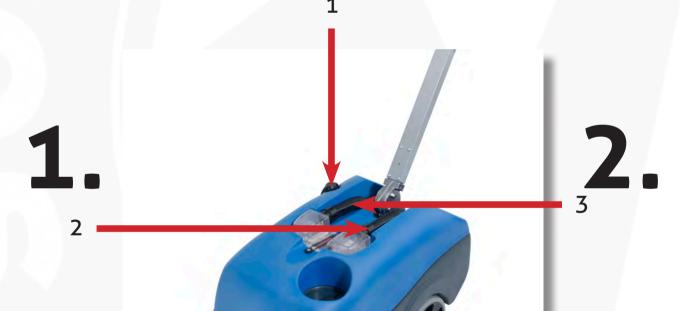

Check all 3 hoses for damage, holes and obstructions.



Thoroughly clean top seperator hood, filter, basket and seal.



Remove squegee and check for wear and damage. Clean thoroughly.



Remove brushes/pad drives and check for wear and damage.

