

# MAINTENANCE CHART

SANS270VNo1

## SANTOEMMA NS270 WAND




**AFTER EVERY USE, ENSURE THAT YOU  
COMPLETE THE FOLLOWING 3 STEPS**

**1.**




Disconnect wand from hose and turn upside down over a drain. This will empty the wand of water to keep it in good condition when not in use.

**2.**

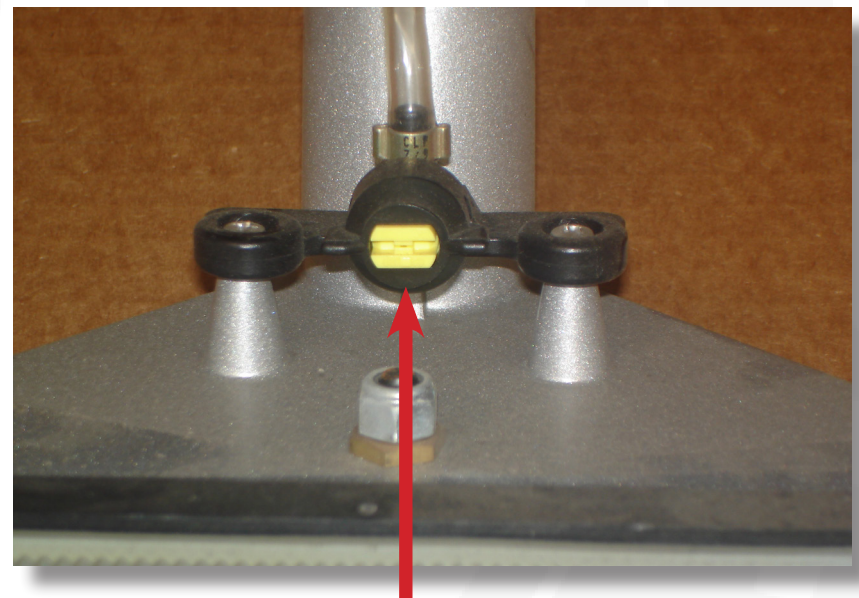

Remove jet nozzle and holder, clean out regularly. Replace nozzle when it loses its ability to evenly fan the water spray.

**3.**

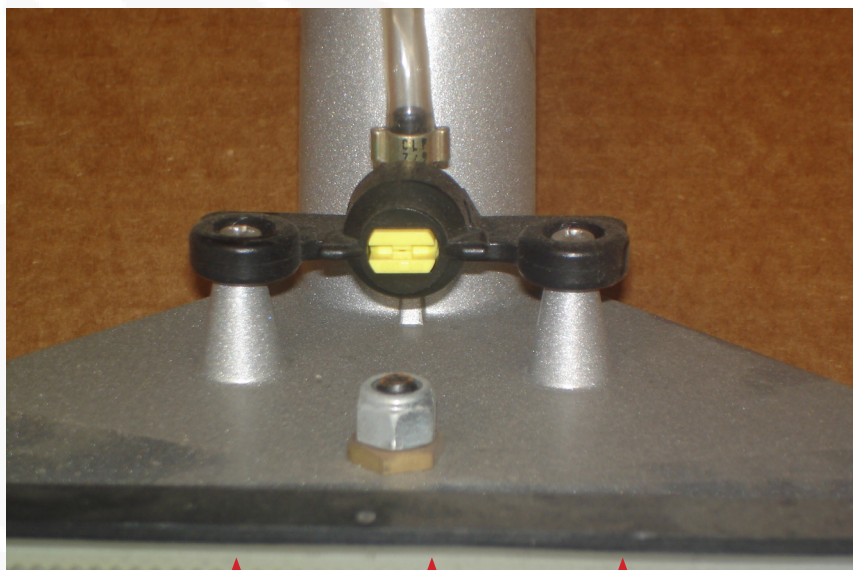

Remove carpet fibres from inside fishtail and stainless steel wand. A bottle brush is very useful for this.



**REPORT ALL DAMAGES AND TECHNICAL ISSUES TO THE SUPERVISOR**