

MAINTENANCE CHART

SANS300MVNo1

SANTOEMMA NS300 WAND




**AFTER EVERY USE, ENSURE THAT YOU
COMPLETE THE FOLLOWING 3 STEPS**

1.




Disconnect wand from hose and turn upside down over a drain. This will empty the wand of water to keep it in good condition when not in use.

2.

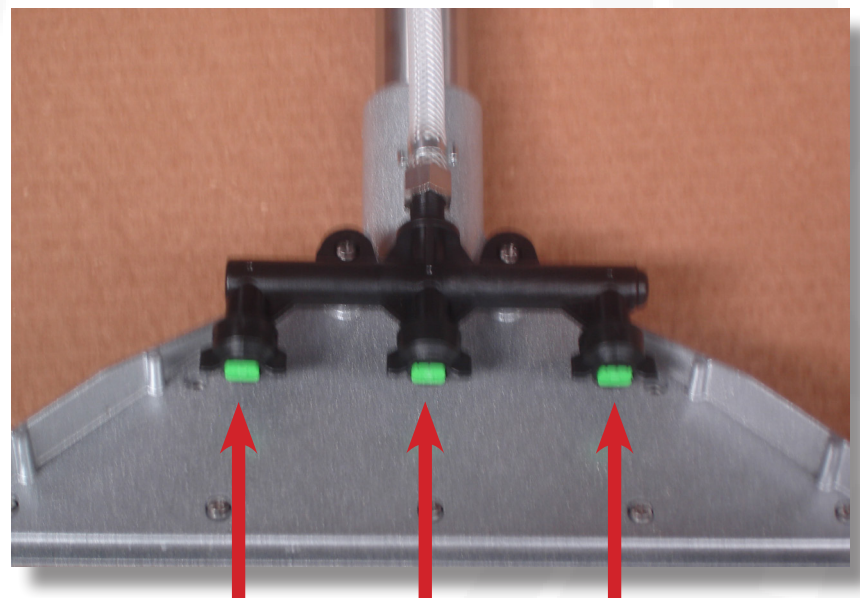

Remove jet nozzles and holders, clean out regularly. Replace nozzles when they lose their ability to evenly fan the water spray.

3.

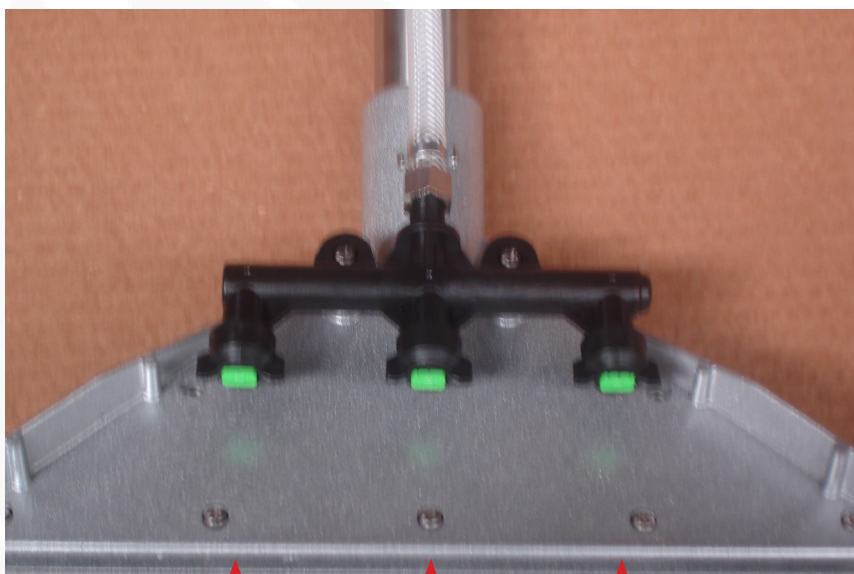

Remove carpet fibres from inside fishtail and stainless steel wand. A bottle brush is very useful for this.



REPORT ALL DAMAGES AND TECHNICAL ISSUES TO THE SUPERVISOR