 



Activate the cursor N to release the ventilation grille and at the same time slide out the grille (in the direction of the arrow) to free it. The prefilter is located in the air outlet area under the Hepa filter. Replace or clean the prefilter by washing it with water, then dry it and put it carefully back in place. Refit the HEPA filter and ventilation grid, sliding it in until you hear the cursor click into place.

STARTING THE CARPET BEATER

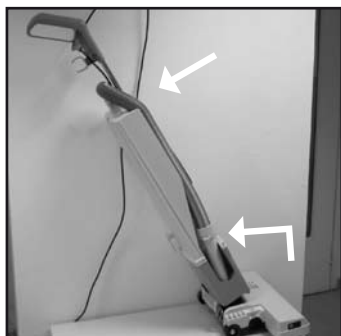

To work, press the release pedal down and lower the vacuum cleaner at the same time. The carpet beater attachment will start up. Avoid frequent use of the carpet beater attachment on special rugs or carpets that could become damaged over time.

 CARPET BEATER CONTROL

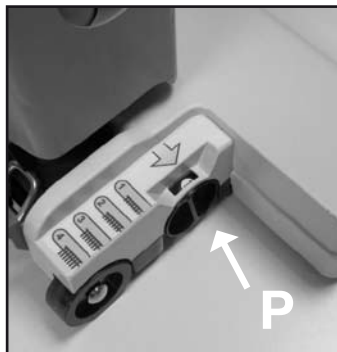


The carpet beater control device constantly regulates the operation of the beater:

Green light: the carpet beater is working correctly.

Red light: the carpet beater is locked or it has been subjected to excessive stress. Lift the base with the adjustment device P, then move the appliance to the upright position for a few seconds and resume working. If the red light persists, switch off the appliance, unplug it and check the causes of blockage.

Red/Green light: the roller is not touching the floor. Adjust the height of the base using the dial P. It is possible that the roller is worn or the transmission belt is broken. Replace the roller or transmission belt.

 HAIR-COVERED STRIP REPLACEMENT

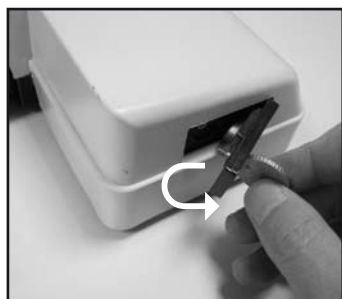

IMPORTANT NOTE: Before proceeding with this operation, switch off the appliance and unplug it. Use a coin or flathead screwdriver to loosen the screw fastening the cover completely Q. Use a tool (e.g. a pair of pliers), to remove the hair-covered, worn strip then replace it with another, following these steps in reverse order to fit it.

APPLIANCE BLOCKAGE

REMOVING OBSTRUCTIONS FROM THE EXTERNAL HOSE



REMOVING OBSTRUCTIONS FROM THE CARPET BEATER



Remove the base of the appliance (see the appliance assembly chapter). Check and if necessary, unblock the pipe, using the pipe of the vacuum cleaner or a flexible brush.