

ENGLISH

DISPOSAL INFORMATION


• PACKAGING

The box and packaging material are designed to protect the appliance during shipping and are biodegradable and recyclable. Please dispose of these items as you would any other recyclable products.

• USED VACUUM CLEANER

The symbols of the materials used for production of parts and accessories and, as well, symbols for recycling are indicated on the parts themselves, where space permits. Old vacuum cleaners may contain materials that can be reused or recycled.

• The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household disposal service or the shop where you purchased the product.

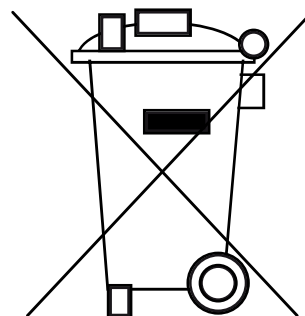

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed including the following:

- **Read all instruction before using the appliance**
- **Always follow these safety instructions**
- **Do not use the appliance on people or on animals**

CONSUMER INFORMATION

- **This appliance is intended for household use only**

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet; your power source should correspond with the voltage rating plate located on the underside of your cleaner. If you are not sure of your home's voltage supply, consult a qualified electrician.
- A damaged vacuum cleaner can be dangerous; check the packaging, the vacuum cleaner and the accessories for any sign of damage. Do not use a damaged appliance.
- Do not leave the vacuum plugged in. Unplug from the outlet when not in use and before servicing or cleaning.

ENGLISH

- Your model is a dry unit, do not use outdoors, on wet surfaces or to vacuum any sort of liquid. Only dry surfaces should be vacuumed. Do not use this appliance to pick up liquids as this could impair the electrical safety of the vacuum cleaner. This applies to freshly shampooed carpets: wait until they are dry.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- If the power cord reel or the cable itself are damaged they should be replaced only by an authorised after sale service. Never use the cleaner with a damaged cord or plug.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors or immersed in water bring the unit to a dealer or to an after sale centre.
- For any repair or for purchase of accessory parts contact only your private dealer or an authorised technical centre. Do not attempt any repairs.
- Do not pull or carry by the cord, use the cord as an handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord. Do not handle the plug or the appliance itself with wet hands.
- If your appliance is equipped with a cord reel always hold the plug when rewinding onto the cord reel. Do not allow the plug to whip while rewinding.
- Floor attachments accessories and wands must not be used at head level to avoid injury to eyes and ears.
- Always keep hair, clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Always put the switch into the OFF position after use.
- Use extra care when cleaning on stairs.
- When using this appliance with an accessory always unplug before connecting any rotating brush. In any case never touch the rotating brush while in use.
- Do not run the vacuum cleaner over the mains cable or any extension cable.
- Avoid picking up sharp objects.

ENGLISH

- Always turn off the appliance before connecting or disconnecting the hose.
- The mains plug and the power socket must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture must touch them. Danger of electric shock.
- Clean the unit only with a dry or slightly damp cloth when disconnected from the power supply.
Never immerse in water.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Never use to pick up flammable or combustible liquids, such as gasoline, or use in areas where fumes may be present.
- Do not put any objects into the openings. Never use with opening blocked, keep free of dust, lint, hair and anything that may reduce the airflow.
- Do not vacuum toner dust. Toner, such as that used in printers and photocopiers can conduct electricity.
- Do not use without dustbag and/or filters in place. Dustbags are disposable and intended to be used only once. Do not attempt to reuse them.
- If your cleaner has the blowing function never use the blower to operate paint sprayers or similar devices that emit volatile or toxic vapors.

WARNING: no liability can be accepted for damages to persons and or objects caused by improper use, maintenance carried out by unauthorised personnel, use of unauthorised and non original spare parts, any form of tampering and or modifications to the original product.

The manufacturer reserves the right to modify the appliance and or the accessories supplied without prior notice.


SAVE THESE INSTRUCTIONS

ENGLISH

DESCRIPTION

- 1 Ergonomic handgrip
- 2 Top and bottom cord winder
- 3 ON/OFF switch
- 4 Carry handle
- 5 Ventilation grid
- 6 HEPA filter
- 7 Bag full light
- 8 Back door
- 9 Power adjuster (optional)
- 10 Base height adjustment
- 11 Door for hair-covered strip removal
- 12 Release pedal
- 13 Suction hose

APPLIANCE ASSEMBLY

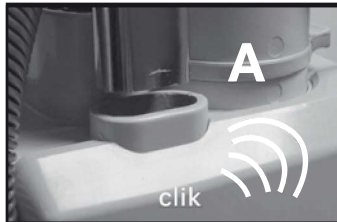


Insert the oval tube complete with handgrip into the top seating in the machine and push all the way in.



Insert the rotary hose coupling in the suction opening B and turn the plastic ring to lock it into place, as in C.



Replace the ergonomic handle of the suction hose in compartment D of the appliance.

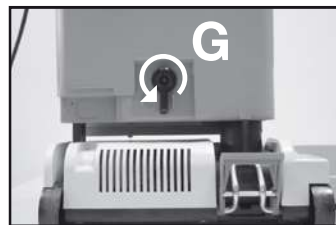


Position the suction group so it is upright, and in line with the suction pipe F and the support E of the carpet beater.

Release the group and push it gently down all the way to the bottom, then lock it in place with the special handle G.


ENGLISH

BAG FULL INDICATOR

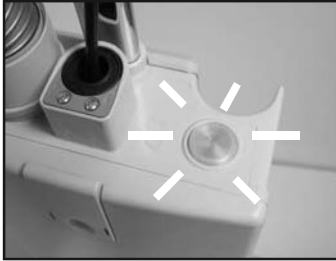

The bag full indicator switches on to show when the dust bag needs replacing or when there is something blocking the suction pipe (in this case, inspect the pipe and remove the blockage).


REPLACING THE BAG FILTER

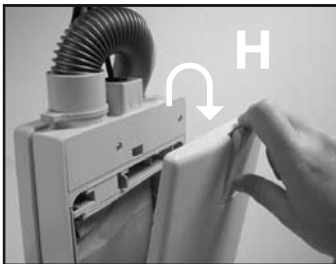

Remove the small door H using the latch, as illustrated in the figure.




Take out the full bag, sliding the cursor L in the direction shown by the arrow.

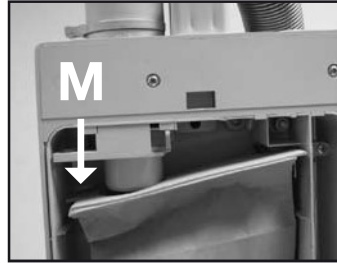


Pull out the full dust bag, as shown in M. To insert a new bag, proceed in reverse order.

FILTER REPLACEMENT

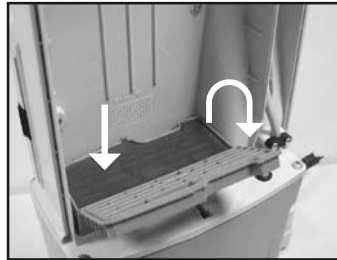


Open the filter support and replace it or clean it by tapping it gently (the filter needs to be replaced about every 20 dust bags).

HEPA FILTER REPLACEMENT; PREFILTER REPLACEMENT OR CLEANING

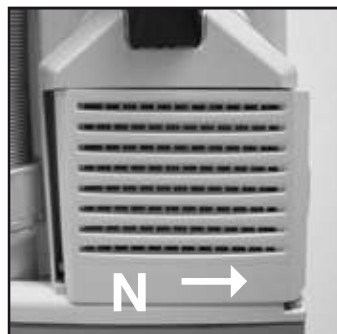


ENGLISH

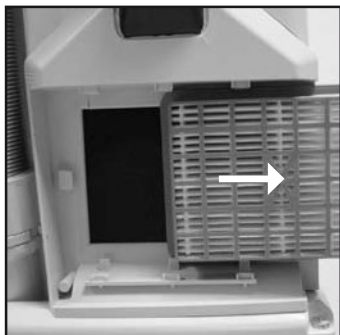


Activate the cursor N to release the ventilation grille and at the same time slide out the grille (in the direction of the arrow) to free it. The prefilter is located in the air outlet area under the Hepa filter. Replace or clean the prefilter by washing it with water, then dry it and put it carefully back in place. Refit the HEPA filter and ventilation grid, sliding it in until you hear the cursor click into place.

STARTING THE CARPET BEATER

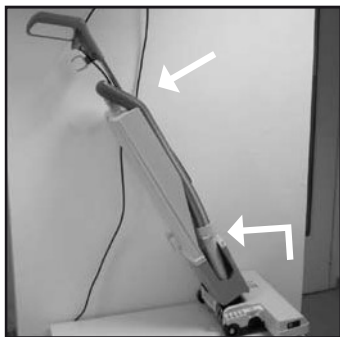

To work, press the release pedal down and lower the vacuum cleaner at the same time. The carpet beater attachment will start up. Avoid frequent use of the carpet beater attachment on special rugs or carpets that could become damaged over time.

CARPET BEATER CONTROL

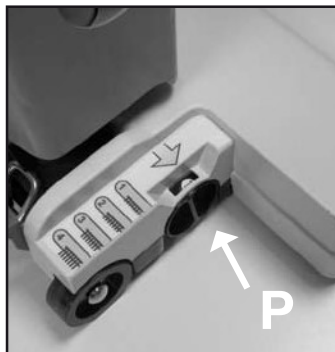

The carpet beater control device constantly regulates the operation of the beater:


Green light: the carpet beater is working correctly.

Red light: the carpet beater is locked or it has been subjected to excessive stress. Lift the base with the adjustment device P, then move the appliance to the upright position for a few seconds and resume working. If the red light persists, switch off the appliance, unplug it and check the causes of blockage.

Red/Green light: the roller is not touching the floor. Adjust the height of the base using the dial P. It is possible that the roller is worn or the transmission belt is broken. Replace the roller or transmission belt.

ENGLISH

HAIR-COVERED STRIP REPLACEMENT

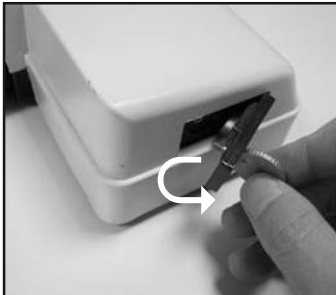

IMPORTANT NOTE: Before proceeding with this operation, switch off the appliance and unplug it. Use a coin or flathead screwdriver to loosen the screw fastening the cover completely Q. Use a tool (e.g. a pair of pliers), to remove the hair-covered, worn strip then replace it with another, following these steps in reverse order to fit it.

APPLIANCE BLOCKAGE

REMOVING OBSTRUCTIONS FROM THE EXTERNAL HOSE



REMOVING OBSTRUCTIONS FROM THE CARPET BEATER



Remove the base of the appliance (see the appliance assembly chapter). Check and if necessary, unblock the pipe, using the pipe of the vacuum cleaner or a flexible brush.